



BLENDER

INSTRUCTION MANUAL



Model no.:BBP-15500PSM

Read this manual thoroughly before using and save it for future reference

IMPORTANT SAFEGUARDS

When using the electrical appliance, the below basic safety precautions should be followed:

1. Read all instructions.
2. Before using check that the voltage power corresponds to the one shown on the appliance nameplate.
4. Do not let cord hang over edge of table or counter.
5. Do not operate any appliance with a damage cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
6. Use by children not intended but foreseeable, but only allowed with supervision.
7. Avoid contacting moving parts.
8. Blades are sharp, so handle carefully.
9. The use of attachment, including Jar, lid, not recommended or sold by manufacture may cause fire, electric shock or injury.
10. The appliance cannot be used for blending hard and dry substance, otherwise the blade could be blunted.
11. Switch off the appliance before approaching parts which move in use.
12. Be sure to turn switch to 0 position after each use. Make sure the motor stop completely before disassembling. And the power supply cord plug is removed from outlet.
13. This appliance is not intended for used by persons (including children) with

reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

14. Children should be supervised to ensure that they do not play with the appliance.


15. Do not immerse the Motor Unit into water or other liquids.

16. Do not use outdoors.

17. Save these instructions

HOUSEHOLD USE ONLY

Know your Blender

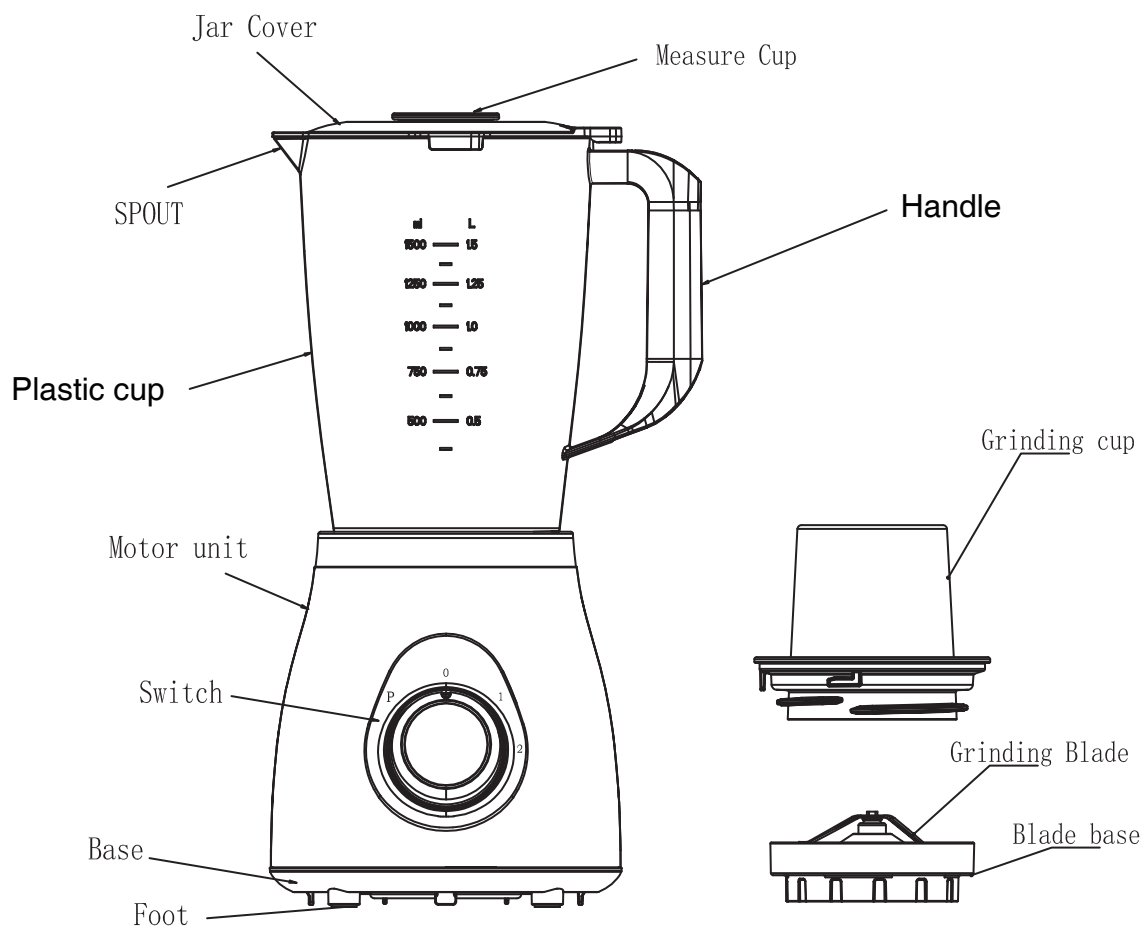

For the initial use

1. Unpack the appliance and place all parts on a horizontal surface.
2. Immerse jar, jar cover, in warm soapy water and rinse them and dry. Never immerse motor unit in water for cleaning to prevent the risk of electric shock.

Caution: the blade is very sharp, handle with great care.

3. The correct assembly way will be described in detail in below sections.
 - 1) Before assembling the jar, be sure the power cord is unplugged from the power outlet and the Switch button is on the 0 position.
 - 2) The jar is suitable for making mixture which the juice and pulp are mixed.
 - 3) For attaching Jar, Place the Jar into the motor unit directly in place, (see fig.1).

Note: make sure the Jar is assembled into the motor unit properly, there is interlock switch on the position, if the Jar is not assembled properly, the blender will not operate.

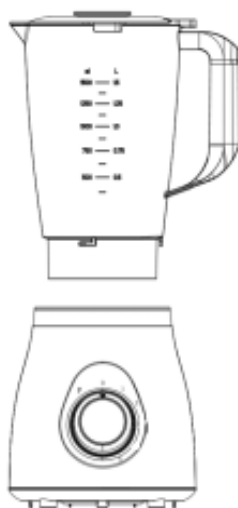


fig.1

Blending fruit and vegetable:

1. Before attaching the power cord into the outlet, make sure the Switch button is in the 0 position.
2. Peeled or cored the fruit or vegetables and then cut it into small dices, put the food piece into the Jar. Usually certain amount of purified water has to be added to facilitate the smooth running of appliance. The proportion of the food and water is 2:3. The amount of mixture should not exceed the max level as indicated on the Jar.

Note: never use boiling liquids or run the appliance empty. The Jar can be used for breaking up ice.

3. Replace the Jar cover on the Jar. Turn the Jar cover into the Jar.
4. Turn the Switch button to the desired setting, there are five settings: P, 0, 1, 2 .
Turn switch to P position and hold it to pulse actuate motor for delicate chopping.
Release it to return the 0 position.

5. The consecutive operation time shall less than 3 minutes. Minimum 1 minutes rest period is required between two consecutive cycles.

7. Turn the Switch button to 0 Position once the mixture has been blended to your desired consistency.

8. Remove the Jar from the Motor Unit (remove it by directly upward), carefully take down the Jar cover, then pour and serve.

Cleaning and Maintenance

The Auto Clean feature can clean the blender and blade assembly easily, rapidly in

complete safety.

-Pour a little warm soapy water into the Jar and turn the Switch button to P position for a few seconds.

-Remove the Jar from the motor unit by directly taking it upward and rinse the Jar, Jar cover under running water.

-Wiping the outer surface of Motor Unit with a damp cloth, do not use abrasive cleansers. Never immerse in water for cleaning

-Dry all parts and then replace them

For complete cleaning, you can hold the blade assembly at the bottom of jar carefully, for it is sharp, take it out by turning coupling on the other side clockwise emphatically, then put the detachable accessories into Dishwasher for clean, they are dishwasher safe components, but the temperature setting shall not exceed 70°C.

If any problem has been encountered during use never disassemble the Motor Base by yourself, no user serviceable parts inside. Contact only the authorized service facility for examination and repair.

Environment Friendly Disposal



*You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipments to
an appropriate waste disposal center.*

BRUHM products are intended household use only

BRUHM has policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its model at any time.