



18" RECHARGEABLE FAN

INSTRUCTION MANUAL



Model no.: BES-18CB

Read this manual thoroughly before using and save it for future reference

IMPORTANT SAFEGUARDS


When using this electrical appliance, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Before using check that the voltage indicated on the product corresponds with the voltage of your electrical outlet.
3. Do not let cord hang on hot surface or over edge of table or counter.
4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
5. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
6. Close supervision is necessary when any appliance is used by or near children.
7. Avoid contacting the moving parts.
8. Switch off the appliance during storage.
9. The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.
10. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To disconnect, turn any control to "OFF", then remove plug from wall outlet by grasping the plug, not the cord.
11. To reduce the risk of injury, never place blade assembly on motor unit without the jar properly attached.
12. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
13. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given

supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Children shall not play with the appliance.

14. Do not leave the machine on unattended.
15. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
16. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
17. Periodically charge the appliance at least 8 hours every three month when storage.

PARTS INCLUDED

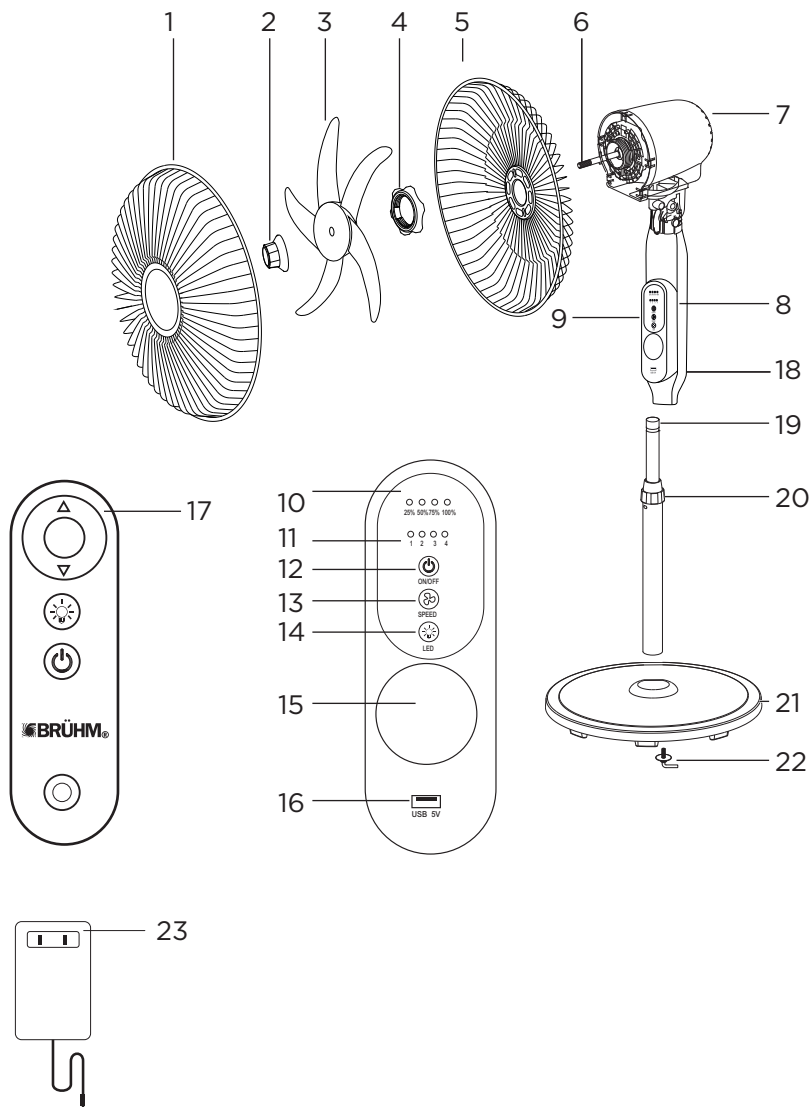

Note: All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.

- | | |
|--------------------------------|-------------------------------------|
| 1. Front Grill | 13. Speed Button |
| 2. Blade Cap | 14. Button of LED light |
| 3. Blade | 15. LED light |
| 4. Plastic Nut | 16. DC 5V output USB Socket |
| 5. Rear Grill | 17. Remote control |
| 6. Motor Shaft | 18. DC input socket for Solar panel |
| 7. Motor | / Adaptor Charge |
| 8. Body | 19. Extensible Pole |
| 9. Control Panel | 20. Height Adjustment Ring |
| 10. Battery Capacity Indicator | 21. Base |
| 11. Speed Indicator | 22. L Shape bolt and Washer |
| 12. ON/OFF Button | 23. 1pc 9V / 3A Adaptor |

HOW TO USE

BEFORE FIRST USE

- Remove all parts from the packaging.
- Check for damage that may have occurred during transport.
If any parts are damaged or missing, do not use the appliance and return it to your retailer immediately.

ASSEMBLING THE FAN WITH PEDESTAL

1. Take the Extendable Pole (19) and turn the L Shape Bolt (22) counterclockwise until the Washer and L Shape Bolt (22) are loose enough to be removed from the Extendable Pole (19). Then insert the Extendable Pole (19) onto the hole on the top of the Base (21). Tighten the L Shape Bolt and Washer (22) at the bottom of Base (21).
2. Turn the Locking Screw just under the Body (8) counterclockwise to loosen and then place the Motor (7) onto the Extendable Pole (19). Tighten it by turning the Locking Screw.
3. Turn the Blade Cap (2) clockwise in the direction marked **LOOSEN** and remove it. Turn the Plastic Nut (4) on the Motor Shaft (6) counterclockwise and remove it.

OPERATING INSTRUCTIONS

1. Place the Fan on a stable, flat, level surface.
2. Insert the 9V / 3A Adaptor into a 100-240V ~ 50/60Hz outlet.
3. Remote control installed with 2pcs AAA battery (If the fan is not going to be used for a long time, remove the battery), the remote control without battery,
4. Turn Fan ON/OFF by pressing the Power Button
5. Fan Speed can be adjusted by pressing SPEED Button
6. Press the Button of LED light to select the light function.
7. DC 5V output USB Socket: Insert the LED bulb into the USB socket to light the LED bulb, insert the USB cable into the USB socket to charge the mobile phone.
8. Charge time: 4-6 hours (for 9V / 3A Adaptor).
Working time: 4-15 hours.
9. Keep in a dry place, free of excessive humidity and water.
10. Keep the fan clean, Wipe away dirt with a clean soft cloth, Do not use solvents...etc.
11. Before cleaning and maintaining, disconnect the electric supply for safety purpose.
12. Unplug the fan if it will not be used for a long period

TECHNICAL DATA

1. Power source: AC 100-240V ~ 50/60Hz
2. 7.4V 7800mAh 57.72WH Lithium Batteries
3. 2 speed LED Lights
4. 4-6 hours Charging Hours (use the adaptor charging)
5. 4-15 hours Working Time
6. DC 5V USB out put socket (Charge mobile phone or LED bulb)

Environment Friendly Disposal



*You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipments to
an appropriate waste disposal center.*

BRUHM products are intended household use only

BRUHM has policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its model at any time.

MADE IN CHINA