



...leaves you with a smile

# USER MANUAL

Read the manual carefully and ensure you have fully understood its contents before operating this device for the first time.

BTF-32V

BTF-43V

BTF-50V

BTF-55V

BTF-65V

BTF-75V

***English***

## CONTENTS

### SPECIFICATIONS

2

### SAFETY INSTRUCTIONS

3-5

### DESCRIPTION OF CONTROL KEYS & CONNECTORS

6-7

### OPERATION OF REMOTE CONTROL

8

### OPERATION OF FUNCTION MENU

9-31

### TROUBLE SHOOTING GUIDE

32

### STAND INSTALLATION

32

## SPECIFICATIONS

|                   |                                         |
|-------------------|-----------------------------------------|
| Aspect Ratio      | 16 : 9                                  |
| System            | PAL/SECAM BG/DK/I, DVB-T/C+T2, DVB-S/S2 |
| Base impedance    | 75 $\Omega$ (Unbalance)                 |
| Receiving TV Band | All Channels Receiveable                |
| AC Supply Voltage | 100-240V~ 50/60Hz                       |

**Note:** Part of the design and the specification may be changed without prior notice.

### INFRA-RED REMOTE CONTROL

**Features:** Full function remote control

**Effective Distance Power:** 8 metres

**Power Supply:** DC 3V (Two batteries, size AAA, recommend use alkaline type batteries)



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

## SAFETY INSTRUCTIONS

### IMPORTANT SAFETY INSTRUCTIONS

#### WARNING

- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE TO PREVENT BLADE EXPOSURE.
- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

|                                                                                                                                                                                                                                                                                                                                        |                                                                                                                                                                                                                                              |                                                                                                                                                                                                                                                                                          |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p>This lightning flash with arrowhead symbol in an equilateral triangle alerts users to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock.</p> | <h4>CAUTION</h4> <p><b>RISK OF ELECTRIC SHOCK<br/>DO NOT OPEN</b></p> <p>Warning: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.</p> |  <p>The exclamation mark within an equilateral triangle alerts users to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

This appliance should not be exposed to water and no object filled with liquid such as a vase should be placed on the unit.

#### CAUTION

- Danger of explosion if batteries are incorrectly replaced.
- Replace with only equivalent type of battery.
- Do not expose battery to direct sunlight or any other source of heat.
- Ensure proper disposal of used batteries.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- To reduce the risk of electric shock, do not perform any servicing other than what is mentioned in the operating manual.
- There are no user-serviceable parts inside the TV; do not open the TV casing.

#### IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.



#### Safe installation

Use the belt fixing the television to facilitate restraining the television from toping forward.



## SAFETY INSTRUCTIONS

 
---

1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.




5. **Water and Moisture** - The appliance should not be used near water.
6. **Cart and Stands** - The appliance should only be used with a cart or stand that is recommended by the manufacturer.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
9. **Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
10. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** - Precautions should be taken.
12. **Power Cord Protection** - Power supply cord should be routed so that it is not likely to be walked on, pinched by items placed upon it against the cord and its end.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Power Line** - An outdoor antenna should be located away from power lines.
15. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built-up static charges.
16. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
17. **Object and Liquid Entry** - Care should be taken so that objects did not fall, and liquids are not spilled into the enclosure through openings.
18. **Conditions requiring Service** - The appliance should be serviced by qualified service personnel when:
  - The power-supply cord or the plug has been damaged.
  - Objects have fallen on or liquid has been spilled into the appliance.
  - The appliance has been exposed to rain.
  - The appliance does not appear to operate normally or exhibits a marked change in performance.
19. The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, table-cloths, curtains, etc.  
No naked flame sources, such as lighted candles, should be placed on the apparatus.  
The apparatus shall be connected to mains socket outlet with a protective earthing connection.  
The appliance coupler regard as disconnection device, the disconnect device shall remain readily operable.
20. The equipment may be used in tropical and moderate climates.

## SAFETY INSTRUCTIONS



### Warning

 High voltages are used in the operating of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.




### Warning

To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.



### Warning

 Do not drop or push objects into television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

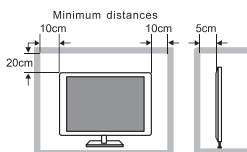

### Caution

If the television is to be built into a compartment or similarly enclosed, the minimum distances must be maintained.

 
Heat built up can reduce the service life of your television, and can also be dangerous.



### Caution

Never stand on, lean on, push suddenly the product or its stand.


You should pay special attention to children.

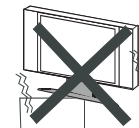

### Caution


Do not place the main unit on an unstable cart stand, shelf or table.

 Serious injury to an individual, and damage to the television, may result should it fall.



### Caution

 When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

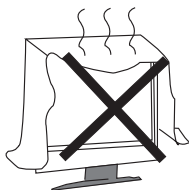

### Caution

Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat. E.g. Video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.



### Caution

The panel used in this product is made of glass. It can break when the product is dropped or applied with force.

Individuals should execute caution when dealing with broken glass should the panel break.



## DESCRIPTION OF CONTROL KEYS & CONNECTORS

 
### CONTROL KEYS:

| BUTTON NAME         | BUTTON ICON TYPE |   |   |         |         | BUTTON INSTRUCTION                          |
|---------------------|------------------|---|---|---------|---------|---------------------------------------------|
|                     | 1                | 2 | 3 | 4       | 5       |                                             |
| SOURCE BUTTON       | SOURCE           |   |   | INPUT   | INPUT   | To display source menu.                     |
| MENU BUTTON         | MENU             |   |   | MENU    | MENU    | To select menu.                             |
| VOLUME UP BUTTON    | VOL+             |   |   |         | VOL+    | To increase the sound volume level          |
| VOLUME DOWN BUTTON  | VOL-             |   |   |         | VOL-    | To decrease the sound volume level          |
| PROGRAM UP BUTTON   | CH+              |   |   |         | CH+     | To select the next higher programme number. |
| PROGRAM DOWN BUTTON | CH-              |   |   |         | CH-     | To select the next lower programme number.  |
| STANDBY BUTTON      | POWER            |   |   | STANDBY | STANDBY | Switch ON/OFF the TV when at standby mode.  |

#### NOTE:

1. All these control buttons designs are common use for our TV models, and please refer to that under your real product.
2. This control keys quantity can be different according to models, and please refer to your real product in hand.

### TV Control Button

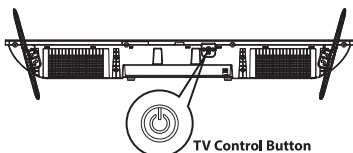

TV Control Button

Note: The pictures are only for reference.



Press : Move

Press & Hold : Select

### Single Key Model

#### 1. One-key function (Optional)

Switch On/Off the TV when at standby mode.

#### 2. One-key to seven-key function (Optional)

##### ■ Turn on the TV

In standby mode, short press TV button to turn on the TV.

 
##### ■ Soft keyboard function

After turning on the TV, short press TV button to call out the following soft keyboard. Short press TV button to select the item you want. Long press TV button to enter or execute the item you have selected.

| Soft Keyboard |                 |                                                                                                                  |
|---------------|-----------------|------------------------------------------------------------------------------------------------------------------|
| Icon          | Name            | Function                                                                                                         |
|               | Channel Up/Down | Change to the next or previous channel in TV mode. Move up or down to select the item you want in menu settings. |
|               | Volume Up/Down  | Decrease or increase the sound volume. Move left or right to select the item you want in menu settings.          |
|               | Menu            | Access the main menu settings.                                                                                   |
|               | Source          | Access the list of input sources.                                                                                |
|               | Power Off       | Turn the TV to standby mode.                                                                                     |

## DESCRIPTION OF CONTROL KEYS & CONNECTORS

### CONNECTORS:

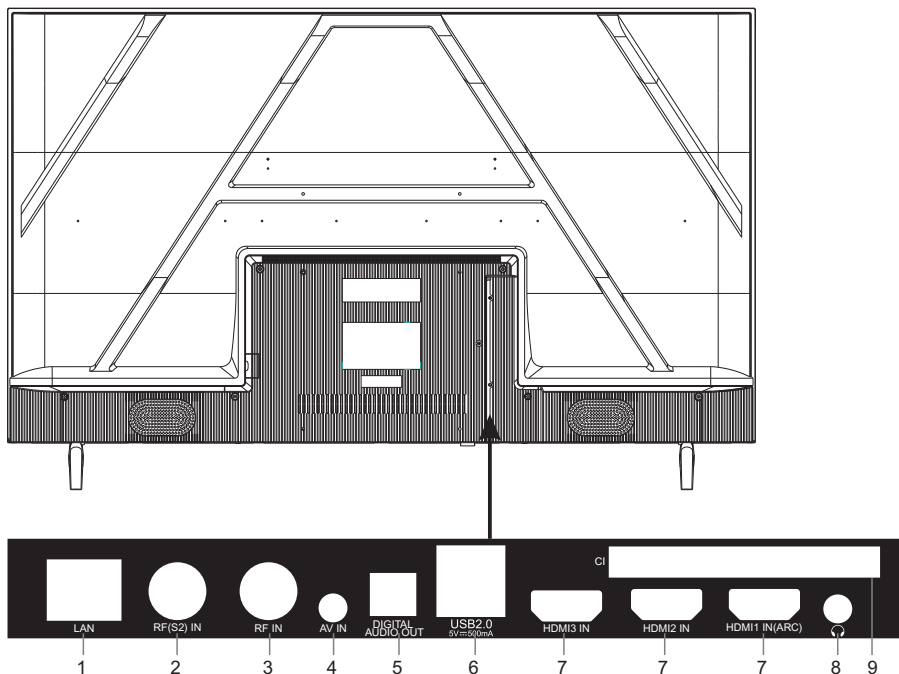

**1. RJ45 IN**

**2. TERMINAL ANTENNA (75 OHM)**

**3. TERMINAL ANTENNA (75 OHM)**

**4. AV IN**

**5. OPTICAL OUT**

**6. USB IN**

**7. HDMI IN**

**8. EARPHONE OUT**

**9. PCMCIA(CI/CI+) IN**

RJ45 input port

Satellite signal input port

TV signal input port

AV input port

Optical output port

USB input port

HDMI signal input port

Earphone output port

PCMCIA(CI/CI+) card input port

 
#### NOTE:

1. All these terminal connection icons are commonly used for our TV models, and please select designated ports.

2. This connection ports quantity can be different according to models, and please refer to your actual product.

## OPERATION OF REMOTE CONTROL

The remote controller cannot be used unless it is within the receivable range. Before you use the remote control, please make sure there's no obstacle between the remote control and the receiver.

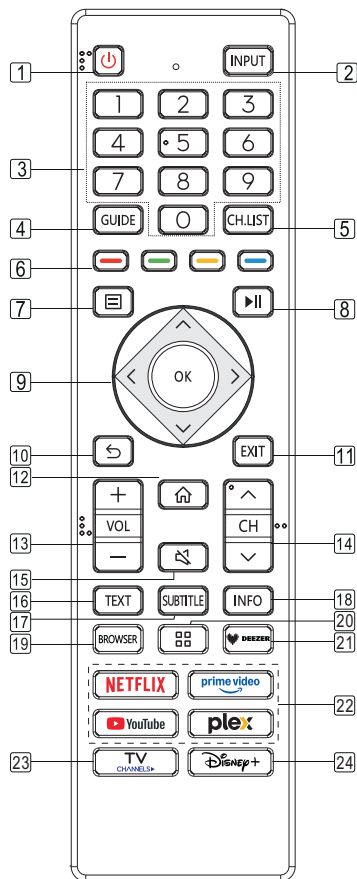

1. STANDBY( ): Standby turn on and off.
2. INPUT: Choose input source.
3. 0~9 : Continue to press the keys to select.
4. GUIDE: Enter GUIDE.
5. CH.LIST: Channel list.
6. 4 Colore: Customized in different page.
7. MENU: Enter or exit menu.
8. : Press one time to pause, press again to playback.
9. Direction/OK: Move up, down, left, right / Confirm.
10. Back: Return to the previous interface or menu.
11. Exit: Exit current interface or menu.
12. Home: Enter home page.
13. Volume: Volume up/down.
14. Channel: Change channel.
15. Mute: Mute sound.
16. TEXT: Enter or exit teletext.
17. SUBTITLE: USB convert video subtitles.
18. INFO: Display info in live TV.
19. BROWSER: Open the BROWSER APP.
20. : button for CSP APPS.
21. deezer : music.
22. Content area: Four buttons for CSP APPS.
23. : Open the TV channel list.
24. : Open FITE application.

### BATTERY INSTALLATION OF REMOTE CONTROL UNIT

1. Remove the battery compartment cover.
2. Insert the two "AAA" (pencil size) 1.5V batteries. Make sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.

3. Close the battery compartment door.

Note:

Replace with new batteries when the TV set begins to show the following symptoms.  
Operation is unsteady or the TV set does not function properly with the remote control unit.

## OPERATION OF FUNCTION MENU

 
### First Time Installation

Please according to the Text Tip to First Time Setup.


Press **▼** / **▲** button to select Language. Press **OK** to confirm and enter the next page.

Choose the way you want to set up the TV, on Mobile or on TV.


Press **OK** to confirm and set up to TV.

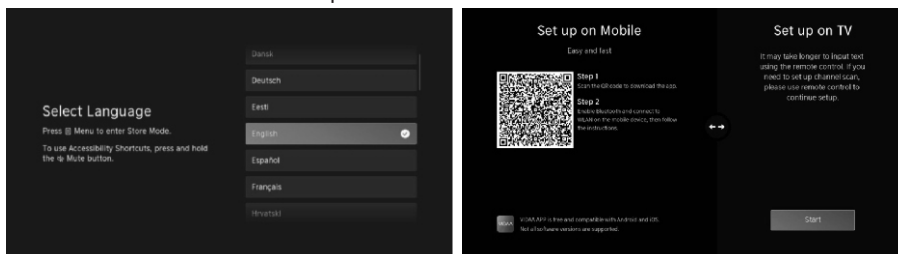

 
Press **▼** / **▲** button to select the Location you want ,confirm and enter the next page.

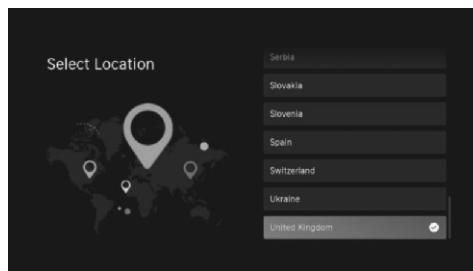

 You can press the corresponding number on the remote control or press **▼** / **▲** / **◀** / **▶** and the OK button to enter postcode. And press OK to enter the next page.

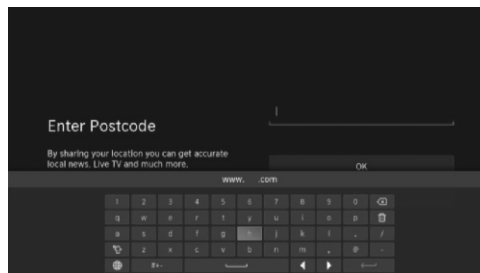



 
Press **▼** / **▲** button to select the channel scan, and press OK button to go to next step.

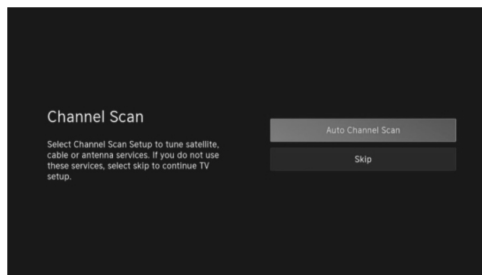


## OPERATION OF FUNCTION MENU

Press【▼】/【▲】/OK button to setup the channel scan, and then press【▼】 button to move to the next step, click the OK button to go to next step.

   You can choose the channel and scan mode, and then press the OK button to start scanning.

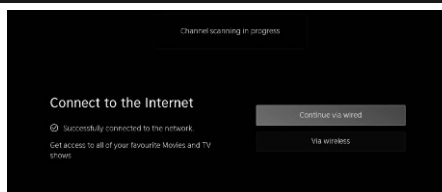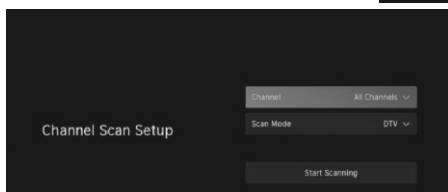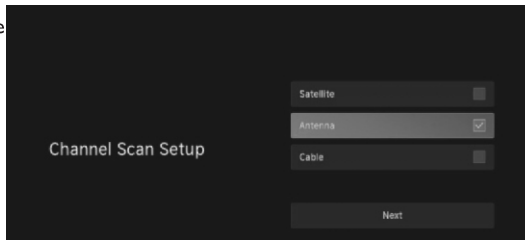


 
View the terms of service, press【▼】/【▲】/OK to select Accept and go to the next step, or press EXIT to return to the previous step.

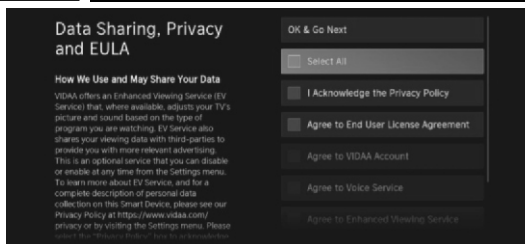


### Sign in your VIDAA account.

If you haven't created an account, please create an account first and then sign in.

  You can also sign in or create an account from your mobile device by scanning the QR code.

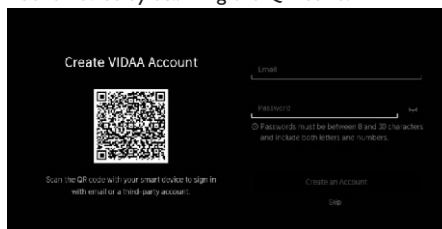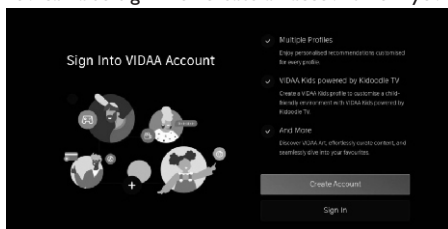


 Press【▼】/【▲】button to select your TV name and press OK button to go to next step.

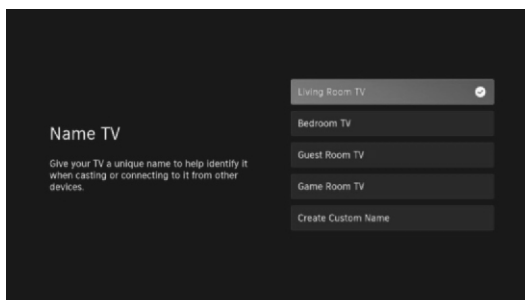


## OPERATION OF FUNCTION MENU

 Press ►/OK to enter the Smart TV.

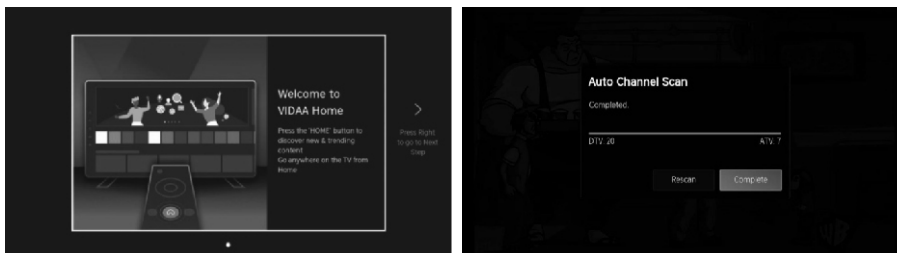


### Home

 When finish First Time setup, you can enter HOME screen.

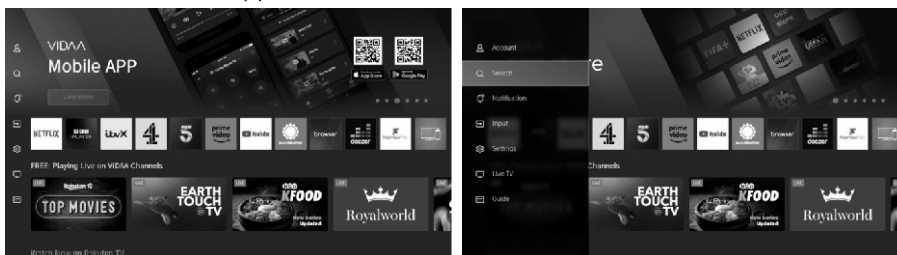

### Account

 Press [▼] / [▲] / [◀] / [▶] button to select account. You can sign into your VIDAA account or create account.

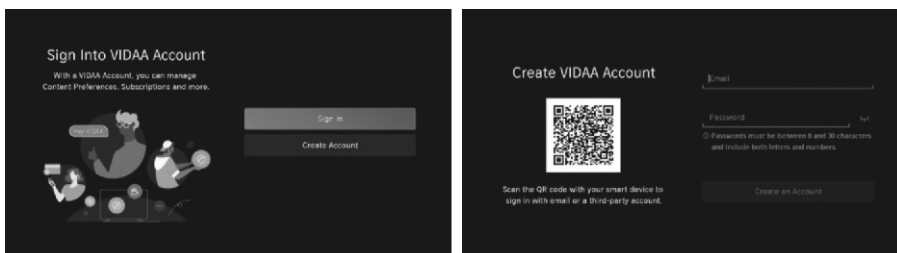

### Search

Press [▼] / [▲] / [◀] / [▶] button to select search and enter the Search interface.

In this interface, you can search by manually entering the search content. Press [▼] / [▲] / [◀] / [▶] to select the content recommended on this page, and press OK to view it.

 


## OPERATION OF FUNCTION MENU

### Notification


Press **▼** / **▲** / **◀** / **▶** button to select notifications.

In this interface, you can choose which types of notifications you would like to receive.

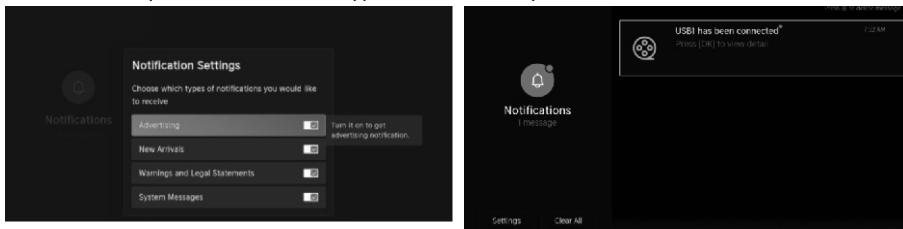

### Input

 Press **▼** / **▲** / **◀** / **▶** button to select Input. Press **▼** / **▲** to select Home /VIDAA tv/HDMI1/HDMI2/HDMI3/AV/Screen Sharing/Content Sharing/Connection Guide, and then press OK to enter.

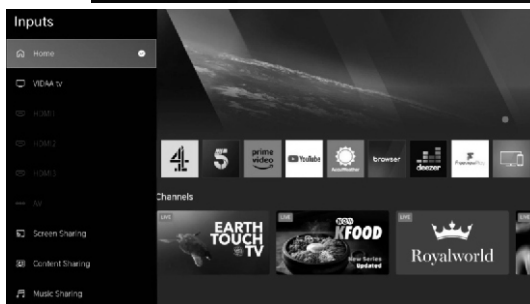


### Screen sharing

Press **▼** / **▲** button to select screen sharing, and press OK to enter. After entering the page, follow the instructions on the page.




### Content sharing

 Press **▼** / **▲** button to select content sharing, and press OK to enter. After entering the page, follow the instructions on the page.

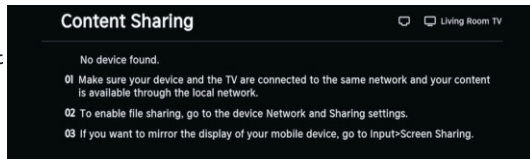

### Music sharing

 Press **▼** / **▲** button to select music sharing, and press OK to enter. After entering the page, follow the instructions on the page.

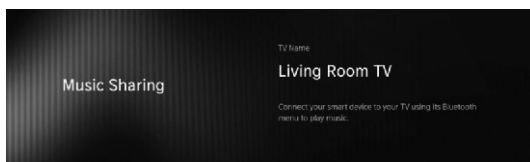


## OPERATION OF FUNCTION MENU

### Settings

Press【▼】/【▲】/【◀】/【▶】button to select Settings on the Home page, and press OK button to enter the Setting Center.

 Press【▼】/【▲】/【◀】/【▶】button to select.

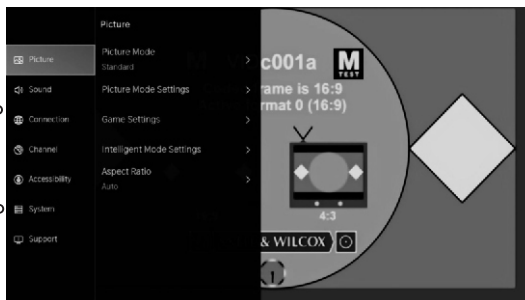


### Picture

Press【▼】/【▲】button to select the option that you want to adjust in the Picture Menu. Press OK button to adjust. After finishing your adjustment, Press OK button to save and return to the previous menu.



### Picture Mode

 Press【▼】/【▲】button to select Picture Mode, then press【◀】/【▶】& OK button to select. (Optional: Standard/Cinema Day/Cinema Night/Dynamic/Sports).

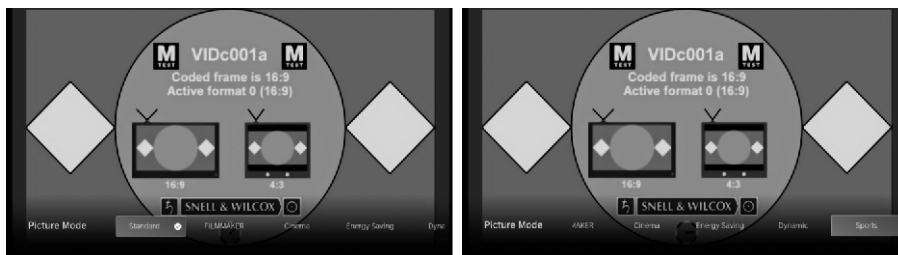

- Standard** The default mode, to make users experience high-quality images under normal light.
- FILMMAKER** Keeping with the filmmakers' intentions in TV, it respects frame rate, aspect ratio, color, and contrast, while also turning off noise reduction and sharpening.
- Cinema** This mode is more suitable for watching movies.
- Energy Saving** The Energy Saver feature changes settings on the TV to reduce power consumption.
- Dynamic** Enhance the contrast, colour and clarity of the screen, so that the picture in the dynamic will balance the colour.
- Sports** This mode is more suitable for watching sport video.

## OPERATION OF FUNCTION MENU

### Picture Mode Settings

Press **【▼】 / 【▲】** button to select picture mode settings, Press **OK** button to enter, then press **【▼】 / 【▲】** to select, and press **OK** to enter.



### Apply Picture Settings

Press **【▼】 / 【▲】** button to select Apply Picture Settings, and press **OK** to enter. Press **【▼】 / 【▲】** button to select Picture Settings apply to all sources or current source, and press **OK** to confirm.

### Backlight/Brightness/Contrast/Colour Saturation/Sharpness

Press **【▼】 / 【▲】** to select, and press **【◀】 / 【▶】** to adjust.

Backlight Adjust image backlight. (Optional: Off/Low/High)

Brightness Adjust image brightness.

 
Contrast Adjust image contrast.

Colour Saturation Adjust image colour density.

Sharpness Adjust the image edge sharpness.

### Advanced Settings


Press **【▼】 / 【▲】** button to select Advanced Settings, and press **OK** to enter.

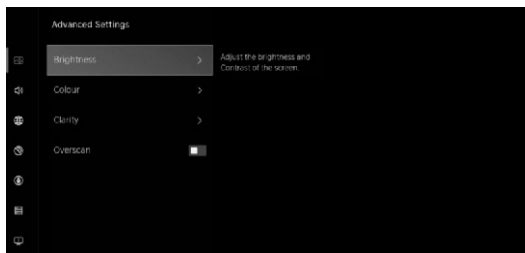

### Brightness

In this menu, you can adjust the brightness and contrast of the screen.

 Press **【▼】 / 【▲】** button to select Brightness, and press **OK** to enter.

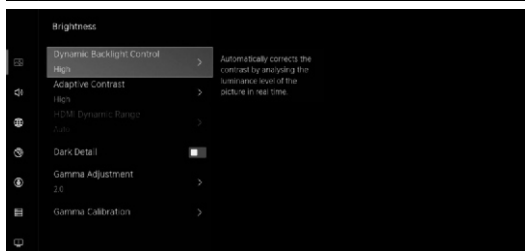

### Dynamic Backlight Control

In this menu, you can adjust the Automatically corrects the contrast by analysing the luminance level of the picture in real time.

Press **【▼】 / 【▲】** to select Dynamic Backlight Control, and press **OK** to enter.

Press **【◀】 / 【▶】** to adjust (option: off/low/high)

### Adaptive Contrast

In this menu, you can automatically darken areas and lighten light areas of images to see more details.

Press **【▼】 / 【▲】** to select Adaptive Contrast, and press **OK** to enter.

Press **【◀】 / 【▶】** to adjust (option: off/low/medium/high)

## OPERATION OF FUNCTION MENU

### HDMI Dynamic Range

In this menu, you can set the HDMI input signal's dynamic range.

Press **▼** / **▲** to select HDMI Dynamic Range, and press OK to enter.

Press **◀** / **▶** to adjust(option:auto/limit/full)

### Dark Detail

In this menu, you can set the Automatically raise brightness and improve shadow detail in dark scenes.

Press **▼** / **▲** to select Dark Detail, and press OK to adjust on/off .

### Gamma Adjustment

In this menu, you can set the gamma value.

Press **▼** / **▲** to select Gamma Adjustment, and press OK to enter.

Press **◀** / **▶** to select adjust (option:1.8/2.0/2.2/2.4/2.6/BT.1866)

### Gamma Calibration

In this menu, you can adjust the Gamma curve which one you selected.

 
Press **▼** / **▲** to select Gamma Calibration.

Press OK/ **▶** button to enter sub-menu to adjust.

### Colour

In this menu, you can adjust the colour, depth and range.

Press **▼** / **▲** button to select Colour, and press OK to enter.

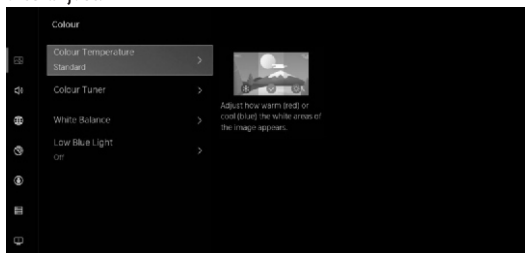

### Colour Temperature

In this menu, you can Adjust the overall colour of the image.

Press **▼** / **▲** button to select Colour Temperature.

Press **◀** / **▶** button to adjust(option:Warm1/Warm2/Standard/Cool)

### Colour Tuner

In this menu, you can Adjust the Hue, saturation and Brightness of colour settings.

Press **▼** / **▲** button to select Colour Tuner.

Press **◀** / **▶** / OK button to enter sub-menu and adjust.

### White Balance

In this menu, you can Adjust the intensity of red, green and blue to view the true colour of all images in the picture.

Press **▼** / **▲** button to select White Balance.

Press **◀** / **▶** / OK button to enter sub-menu and adjust.

### Low Blue Light

 
In this menu, you can Adjust the blue light to protect eyes. Press **▼** / **▲** to select low blue light .

Press **◀** / **▶** / OK button to adjust (option:off/on).

### Clarity

In this menu, you can adjust the clarity and remove noise.

Press **▼** / **▲** button to Clarity, and press OK to enter.

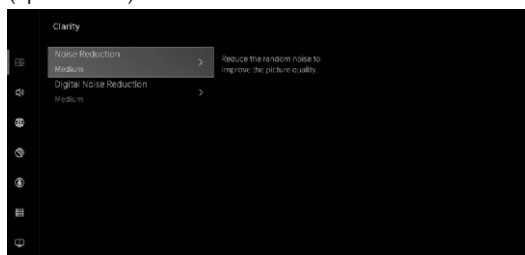

## OPERATION OF FUNCTION MENU

### Noise Reduction

Set up options to eliminate the image noise intensity.

Press **▼** / **▲** button to select Noise Reduction.

Press **◀** / **▶** button to select (option:Off/Low/Medium/High)

### Digital Noise Reduction

Set up options to eliminate the Digital noise intensity.

Press **▼** / **▲** button to select MPEG Noise Reduction.

Press **◀** / **▶** button to select (option:Off/Low/Medium/High)

### Overscan

In this menu, you can Change the video size setting to crop the edges of the displayed picture.

 
Press **▼** / **▲** button to Clarity, and press **OK** to adjust off/on.

### Reset Current Mode

Press **OK** button to select Reset Current Mode.


### Game Settings

Press **▼** / **▲** button to select Game Settings. Press **OK** button to enter, and press **◀** / **▶** / **OK** to select On/Off.

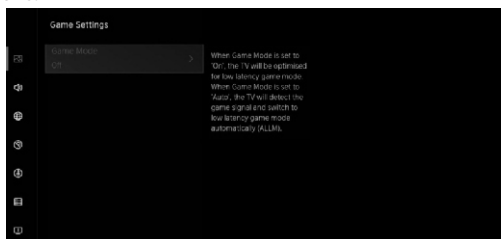

### Intelligent Mode Settings

 Press **▼** / **▲** button to select Intelligent Mode Settings. Press **OK** button to enter, then press **◀** / **▶** / **OK** to select AI Picture Optimisation On/Off.

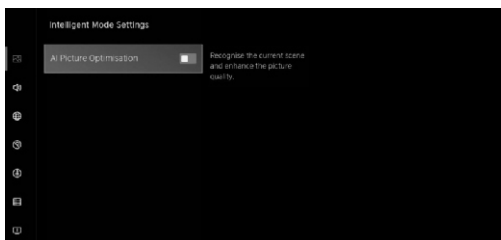


### Aspect Ratio

Press **▼** / **▲** button to select aspect ratio, then press **◀** / **▶** button to select Auto/16:9/4:3/ Movie Zoom.



### Sound

 
Press **▼** / **▲** button to select the option that you want to adjust in the Sound Menu. Press **OK** button to adjust. After finishing your adjustment, Press **OK** button to save and return to the previous menu.

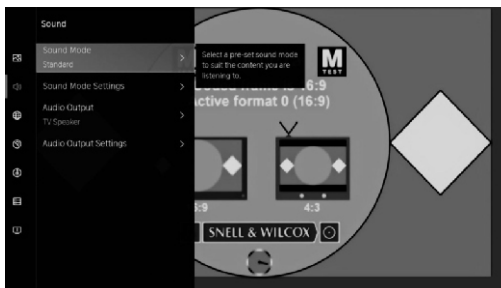

## OPERATION OF FUNCTION MENU

### Sound Mode

 
Press【▼】/【▲】 button to select your favorite Sound Mode .  
(Optional: Standard/Theatre/Music/Speech/Late Night/Sports.)

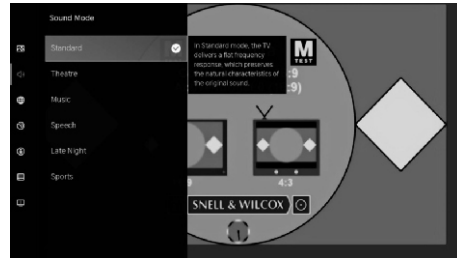

- Standard Produces a balanced sound in all environments.
- Theatre Theatre mode increases the surround sound effect and provides a more prominent subwoofer response.
- Music Preserves the original sound.Good for musical programs.
- Speech Low and high frequencies are attenuated to improve the reproduction and clarity of the human voice.
- Late Night Improve the reproduction and clarity of the human voice with a low volume level.
- Sports Optimized sound for watching football game.

### Sound Mode Settings

 Press【▼】/【▲】 button to select Sound Mode Settings.  
Press OK button to enter sub-menu.

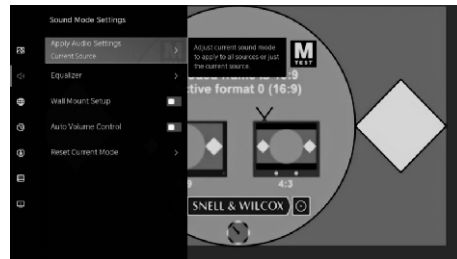

### Apply Audio Settings

Adjust the Current sound mode to apply to all sources or just current source.  
Press【▼】/【▲】 button to select Apply Audio Settings, then press【▼】/【▲】& OK button to select Current Source /All Sources.

### Equalizer

Press【▼】/【▲】 button to select Equalizer; then press【◀】/【▶】 button to adjust Equalizer detail.  
(Optional: 100Hz/250Hz/600Hz/1KHz/2.5KHz/6KHz/10KHz)

### Wall Mount Setup/Auto Volume Control

Press【▼】/【▲】 button to select ,and press【▶】/ OK button to select On/Off.

### Reset Current Mode

Press【▼】/【▲】 button to select Reset Current Mode,and press【◀】/【▶】& OK button to choose restore or not.

### Audio Output

Press【▼】/【▲】 button to select Audio Output. Press OK button to enter sub-menu.  
(option:TV Speaker/ARC/Bluetooth Speaker/SPDIF)



## OPERATION OF FUNCTION MENU

### Audio Output Settings

Press [▼] / [▲] button to select Audio Output. Press OK button to enter sub-menu

#### Balance

Balanced left and right channels.  
Press [▼] / [▲] button to select Balance.  
Press [◀] / [▶] button to adjust.

#### Lip Sync

Press [▼] / [▲] button to select Lip Sync, and then press [◀] / [▶] button to adjust.

#### Digital Audio Output Format

Press [▼] / [▲] button to select Digital Audio Output Format.

 
#### Digital Audio Output Delay

Press [▼] / [▲] button to select Digital Audio Delay Output.

#### HDMI-eARC

You can connect an audio device that supports eARC. Muting occurs temporarily during device connection.


Press [▼] / [▲] button to select HDMI-eARC. Press [▶] / OK button to adjust.

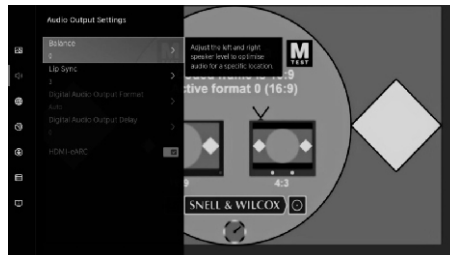

### Connection

Press [▼] / [▲] button to select Connection. Press OK button to enter sub-menu.

 (Option: TV Name/Network/Mobile Device Connection/HDMI & CEC/Bluetooth/Device Management/Mobile App Download)

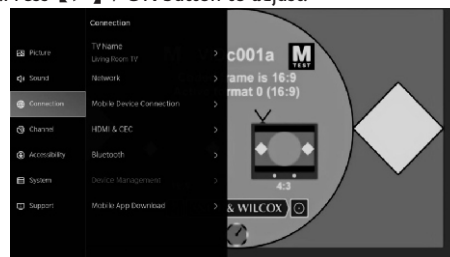

#### TV Name

Press [▼] / [▲] button to select TV Name and Press [▶] / OK button to edit TV name.

### Network

Press [▼] / [▲] button to select Network and Press OK button to set up the network.

(option: Network Configuration/Internet Connection/Wake on Wireless Network/Wake on LAN)



#### Network Configuration

Press [▼] / [▲] button to select Network Configuration to set up the network.

#### Internet Connection

Press [▼] / [▲] button to select Internet Connection to check Internet Connection.

#### Wake on Wireless Network

Press [▼] / [▲] button to select Wake on Wireless Network, then press [◀] / [▶] button to select On/Off.

#### Wake on LAN

Press [▼] / [▲] button to select Wake on LAN. Press [◀] / [▶] button to select On/Off.

## OPERATION OF FUNCTION MENU

### Mobile Device Connection

Press **【▼】 / 【▲】** button to select Mobile Device Connection and Press **OK** button to set up the connection management of a mobile device, smartphone, or personal computer.  
(option: content sharing/screen sharing)



### Content Sharing

Allows video, music, or other content to be shared from another device to your TV.  
Press **【▼】 / 【▲】** button to select Content Sharing and press **【▶】 / OK** button to adjust on/off.

### Screen Sharing

Share your device's screen directly without opening screen sharing APP.  
Press **【▼】 / 【▲】** button to select Screen Sharing and press **【▶】 / OK** button to adjust on/off.

### HDMI&CEC

Press **【▼】 / 【▲】** button to select HDMI&CEC and Press **OK** button to set up CEC.  
(option: HDMI format/CEC control/Device Auto Power Off/Device Auto Power On/TV Auto Power On /CEC Device Lists)



### HDMI Format

Press **【▼】 / 【▲】** button to select HDMI Format and Press **【▶】 / OK** button to set up HDMI Format.

### CEC control/Device Auto Power Off/Device Auto Power On/TV Auto Power On

Press **【▼】 / 【▲】** button to select the features you want and Press **【▶】 / OK** button to adjust ON/OFF.

 
|                       |                                                                            |
|-----------------------|----------------------------------------------------------------------------|
| CEC control           | Allow HDMI devices to control each other                                   |
| Device Auto Power Off | CEC device auto power off with TV                                          |
| Device Auto Power On  | CEC devices connected to the HDMI inputs will be switched on automatically |
| TV Auto Power On      | Allow this device to auto turn on by CEC peripheral                        |

### CEC Device Lists

Press **【▼】 / 【▲】** button to select CEC Device Lists and Press **【▶】 / OK** button to check CEC device lists.

### Bluetooth

Press **【▼】 / 【▲】** button to select Bluetooth and Press **OK** button to set up Bluetooth..  
(option: Bluetooth/Remote Control Auto Pairing/Bluetooth Device/Music Sharing/Bluetooth Connection Guide)

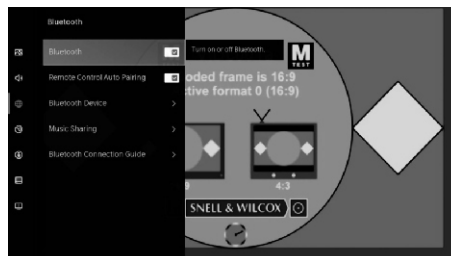

## OPERATION OF FUNCTION MENU

### Bluetooth

Press **▼** / **▲** button to select Bluetooth and Press **▶** / OK button to turn on or off Bluetooth.

### Remote Control Auto Pairing

Turn on to ensure that the remote control can connect to TV via Bluetooth when any button is pressed.

Press **▼** / **▲** button to select Remote Control Auto Pairing and Press **▶** / OK button to turn on or off.

### Bluetooth Device

Press **▼** / **▲** button to select Bluetooth Device and Press **▶** / OK button to manage Bluetooth devices..

### Music Sharing

Press **▼** / **▲** button to select Music Sharing and Press **▶** / OK button to enter..

### Bluetooth Connection Guide

Press **▼** / **▲** button to select Bluetooth Connection Guide and Press **▶** / OK button to check Bluetooth Connection Guide..

### Device Management

Press **▼** / **▲** button to select Device Management and Press **▶** / OK button to manage authorized devices for device control..

### Mobile App Download

Press **▼** / **▲** button to select Mobile App Download and Press **▶** / OK button to check QR code.



 
### Channel

Press **▼** / **▲** button to select Channel.

1. Press **▼** / **▲** button to select the option that you want to adjust in the Channel Menu.

2. Press OK button to adjust.


3. After finishing your adjustment, Press OK button to save and return to the previous menu.

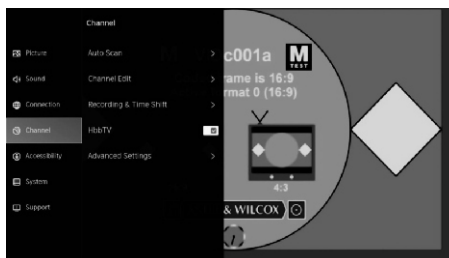

### Auto Scan

Automatically scan for channels.

 Press **◀** / **▶** button to choose change setup/rescan, then press OK button to setup.

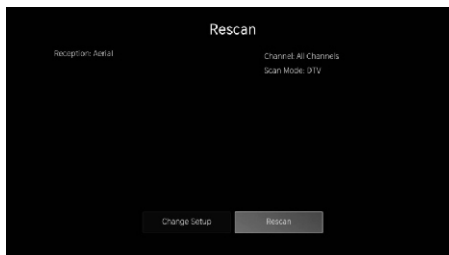

## OPERATION OF FUNCTION MENU

### Channel Edit

Press **▼** / **▲** button to select Channel Edit, then press **OK** / **▶** button to enter.



### Recording & Time Shift

Press **▼** / **▲** button to select Recording & Time Shift, then press **OK** / **▶** button to enter.

### HbbTV

Press **▼** / **▲** button to select HbbTV, then press **OK** / **▶** button to set up on or off.

### Advanced Settings

 
Press **▼** / **▲** button to select Advanced Settings, then press **OK** / **▶** button to enter.



### Manual Scan

Press **▼** / **▲** button to select Manual Scan, then press **OK** / **▶** button to enter.

Press **▼** / **▲** button to select DTV Manual Scan / Manual Scan / ATV Manual Scan.

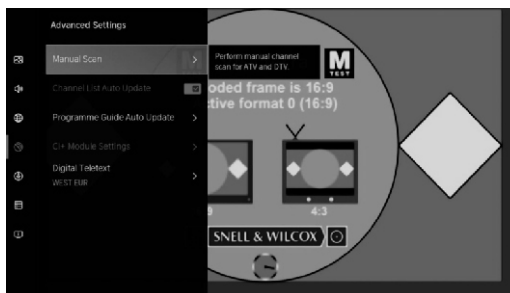

### DTV Manual Scan

Press **▼** / **▲** button to select DTV Manual Scan, then press **OK** button to start.



## OPERATION OF FUNCTION MENU

### ATV Manual Scan

Press **▼** / **▲** button to select ATV Manual Scan, then press OK button to start.



### Channel List Auto-Update

Press **▼** / **▲** button to select Channel List Auto-Update, then press OK button to select On/Off.

### Programme Guide Auto Update

Press **▼** / **▲** button to select Programme Guide Auto Update.

### CI+ Module Settings

 
Press OK button to select Review the Advanced Settings menu.

### Digital Teletext

Press OK button to select Digital Teletext decoding.  
(Optional: WEST EUR/EAST EUR/Russian/Arabic/Persian/Greek)

### Accessibility

Press **▼** / **▲** button to select Accessibility, then press OK / **▶** button to enter.

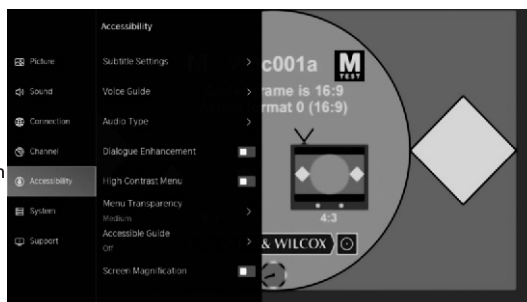

### Subtitle Settings

Press **▼** / **▲** button to select Subtitle Settings, then press **▼** / **▲** button to select Subtitle/Primary Subtitle/Secondary Subtitle/Channel Subtitle Storage.

### Voice Guide

Press **▼** / **▲** button to select Voice Guide, then press OK button to setup Voice Guide.

### Audio Type

Press **▼** / **▲** button to select Audio Type, then press **▼** / **▲** button to select Audio Type/Audio Format/Fader Control.

### Dialogue Enhancement

Press **▼** / **▲** button to select Dialogue Enhancement, then press OK / **▶** button to select On/Off.

## OPERATION OF FUNCTION MENU

### High Contrast Menu

Press **▼** / **▲** button to select High Contrast Menu, then press **OK** / **▶** button to select On/Off.

### Menu Transparency

Press **▼** / **▲** button to select Menu Transparency, then press **▼** / **▲** button to choose Off/Medium/High.

### Accessible Guide

Press **▼** / **▲** button to select Accessible Guide, then press **OK** button to select Off/Freeview Accessible Guide/Large Font Guide.

### Screen Magnification

Press **▼** / **▲** button to select Screen Magnification, then press **OK** / **▶** button to select On/Off.

## System

Press **▼** / **▲** button to select System in the main menu.

1. Press **▼** / **▲** button to select the option that you want to adjust in the System Menu.
2. Press **OK** button to adjust.
3. After finishing your adjustment, Press **OK** button to save and return to the previous Menu.



### Time

Press **▼** / **▲** button to select Time.



### Time Format

Press **▼** / **▲** button to select Time Format. (Optional: 12-hour/24-hour)

### Date/Time

Set the Date and Time

Press **▼** / **▲** button to select, then press **OK** / **▶** to setup.

### Time Zone

Select your time zone

Press **▼** / **▲** button to select Time Zone, then press **OK** / **▶** to enter sub-menu to setup.

 
### Daylight Saving

Press **▼** / **▲** button to select Daylight Saving. (Optional: Off/On/Sync from DTV)

## OPERATION OF FUNCTION MENU

### Timer Settings

Press **▼** / **▲** button to select Timer Settings.

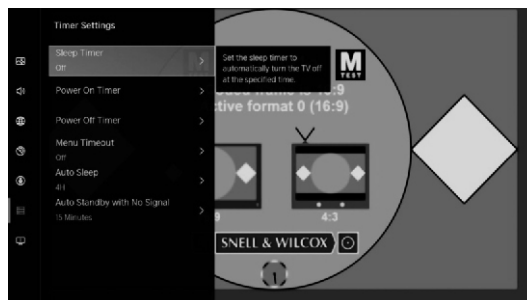

#### Sleep Timer

Press **▼** / **▲** button to select Sleep Timer. (Optional: Off/15/30/60/90/120 Minutes/User Defined)

#### Power On Timer

Press **▼** / **▲** button to select Power On Timer. Set the time you want the TV to turn on automatically.

#### Power Off Timer

Press **▼** / **▲** button to select Power Off Timer. Set the time you want the TV to turn off automatically.

#### Menu Timeout

Press **▼** / **▲** button to select Menu Timeout. (Optional: Off/10s/20s/30s/60s)

#### Auto Sleep

 
Press **▼** / **▲** button to select Auto Sleep. (Optional: Off/3H/4H)

#### Auto Standby with No Signal

Press **▼** / **▲** button to select Auto Standby with No Signal. (Optional: Off/15 Minutes)

### Language and Location

Press **▼** / **▲** button to select Language and Location.

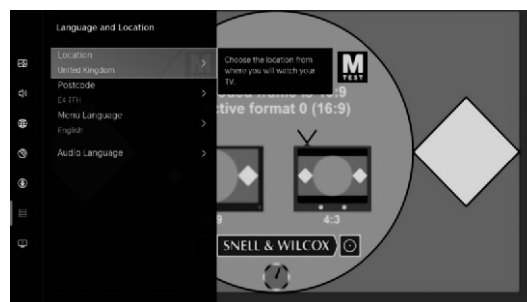

#### Location

Press **▼** / **▲** button to select Location, and press OK / **▶** to select.

#### Postcode

Press **▼** / **▲** button to select Postcode, and press OK/ **▶** to change.

#### Menu Language

Press **▼** / **▲** button to select Menu Language, and press OK/ **▶** to select.

#### Audio Language

Press **▼** / **▲** button to select Audio Language, and press OK/ **▶** to select. (option: Primary Audio/Secondary Audio)

#### Primary Audio

Press **▼** / **▲** button to select Primary Audio, and press OK/ **▶** to select.

 
## OPERATION OF FUNCTION MENU

### Secondary Audio

Press **【▼】 / 【▲】** button to select Secondary Audio, and press **OK / 【▶】** to select.

### Voice Service

Press **【▼】 / 【▲】** button to select Voice Service. Set up and enjoy the VIDAA Voice Assistant service. You can search for your favourite movies or control your TV.

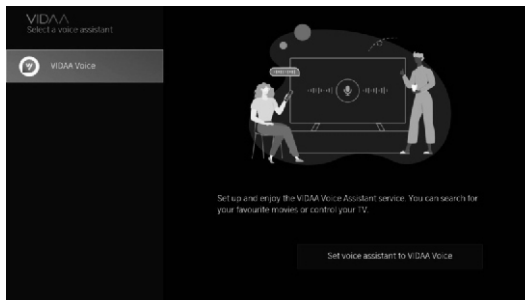

### Parental Control

Press **【▼】 / 【▲】** button to select Parental Control.

Turn on Parental Controls to prevent children from being able to view certain content.

### Application Settings

Press **【▼】 / 【▲】** button to select Application Settings.



### Clear Cache

Press **【▼】 / 【▲】** button to select Clear Cache, then press **OK / 【▶】** button to enter sub-menu.

### Delete Cookies

Press **【▼】 / 【▲】** button to select Delete Cookies, then press **OK / 【▶】** button to enter sub-menu.

### Do Not Track

Press **【▼】 / 【▲】** button to select Do Not Track, then press **OK / 【▶】** to select On/Off.

### Prime Video

 
Press **【▼】 / 【▲】** button to select Prime Video, and press **OK / 【▶】** to select.

### Netflix

Press **【▼】 / 【▲】** button to select Netflix, and press **OK / 【▶】** to select.

### Advanced Settings

Press **【▼】 / 【▲】** button to select Advanced Settings, then press **OK / 【▶】** button to enter

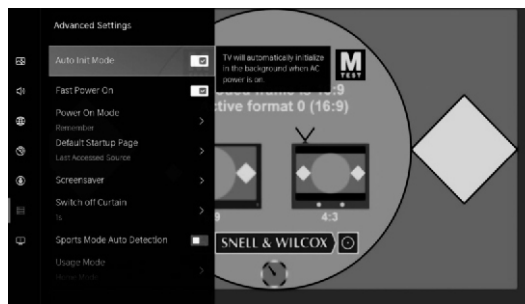

## OPERATION OF FUNCTION MENU

### Auto Init Mode

Press **▼** / **▲** button to select Auto Init Mode, then press **OK** / **▶** button to set up on or off.

### Fast Power On

Press **▼** / **▲** button to select Fast Power On, then press **OK** / **▶** button to set up on or off.

### Power On Mode

Press **▼** / **▲** button to select Power On Mode, then press **OK** / **▶** button to select.  
(Optional: Power on/Standby/Remember)

### Default Startup Page

Press **▼** / **▲** button to select Default Startup Page, then press **OK** / **▶** button to enter.

### Screensaver

Press **▼** / **▲** button to select Screensaver, then press **OK** / **▶** button to enter.

### Switch off Curtain

Press **▼** / **▲** button to select Switch off Curtain, then press **OK** / **▶** button to enter.  
(Optional: Off/1s/2s/3s/4s/5s)

### Sports Mode Auto Detection

Press **▼** / **▲** button to select Sports Mode Auto Detection, and press **OK** / **▶** button to select On/Off.

### Usage Mode

Press **▼** / **▲** button to select Usage Mode, then press **OK** / **▶** button to select.  
(Optional: Home Mode/Store Mode)

### Enhanced Viewing Settings

 
Press **▼** / **▲** button to select Enhanced Viewing Settings, then press **OK** / **▶** button to enter.

### Personalised Ads

Press **▼** / **▲** button to select Personalised Ads, and press **OK** / **▶** button to select On/Off.

### Support

Press **▼** / **▲** button to select Support, then press **OK** / **▶** button to enter.

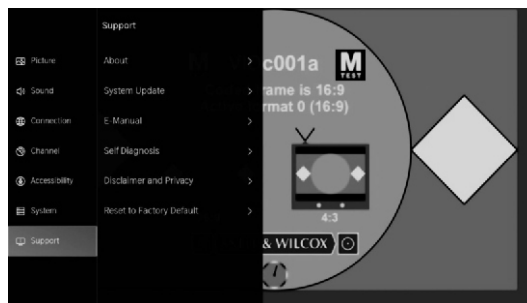

### About

View System information.

Press **▼** / **▲** button to select System Info, then press **OK** / **▶** button to enter sub-menu.

### System Upgrade

Set your TV to receive the latest firmware.

Press **▼** / **▲** button to select System Upgrade, then press **OK** / **▶** button to enter sub-menu.

## OPERATION OF FUNCTION MENU

### E-Manual

Launch the E-Manual and get to know more about your TV.

Press **▼** / **▲** button to select E-Manual, then press OK/**▶** button to enter sub-menu.

### Self Diagnosis

Perform self diagnosis to test sound, picture and connections.

Press **▼** / **▲** button to select Self Diagnosis, then press OK/**▶** button to enter sub-menu.

### Disclaimer and Privacy

Click to read the Disclaimer details.

Press **▼** / **▲** button to select Disclaimer and Privacy, then press OK/**▶** button to enter sub-menu.

 
### Reset to Factory Default

Restore your TV to the factory default.

Press **▼** / **▲** button to select Reset to Factory Default, then press OK/**▶** button to enter sub-menu and select.


## Live TV

Press **▼** / **▲** button to select Live TV, then press OK button to enter.

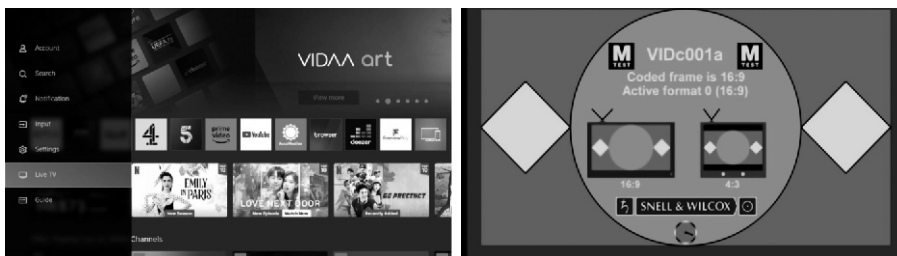

### Guide

 
Press **▼** / **▲** button to select Guide, then press OK button to enter.

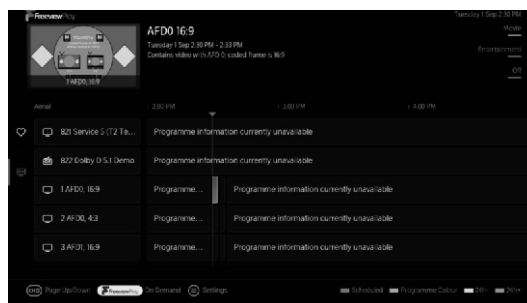

## OPERATION OF FUNCTION MENU

### Menu

 In the Live TV interface, press MENU button to wake up MENU, then press [▼] / [▲] button to select.

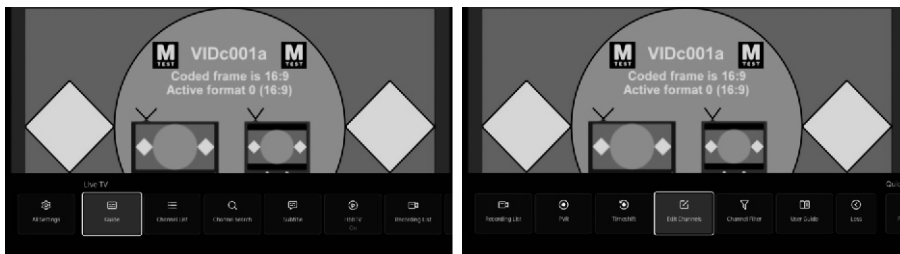


#### Guide

Press [▼] / [▲] button to select Guide, then press OK button to enter sub-menu.  
Refer to page 48 for this part.

#### Channel List

 Press [▼] / [▲] button to select Channel List, then press OK button to enter sub-menu.

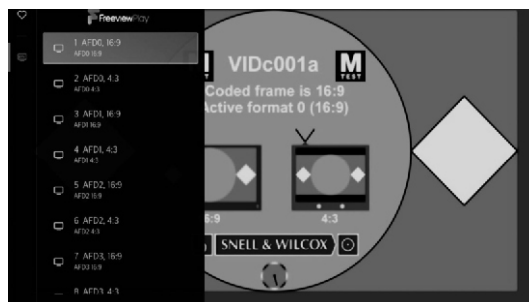

#### Channel Search

Press [▼] / [▲] button to select Channel Search, then press OK button to enter.

#### Subtitle

 
Press [▼] / [▲] button to select Subtitle, then press OK button to enter sub-menu.

#### HbbTV

Press [▼] / [▲] button to select Hbb TV, then press OK button to select On/Off.

#### Recording List

Press [▼] / [▲] button to select Recording List, then press OK button to enter sub-menu.

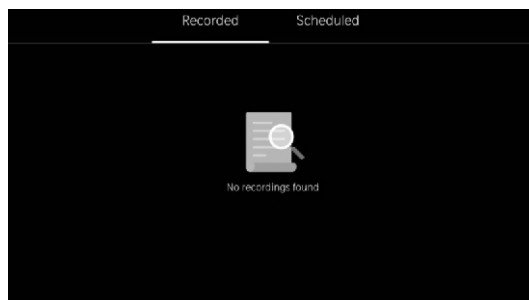

#### PVR

Press [▼] / [▲] button to select PVR, then press OK button to enter sub-menu.

## OPERATION OF FUNCTION MENU

### Timeshift

 
Press **▼** / **▲** button to select Timeshift ,then press OK button to enter sub-menu.

### Edit Channels

Press **▼** / **▲** button to select Edit Channels ,then press OK button to enter sub-menu.  
Refer to page 35 for this part.

### Channels Filter

Press **▼** / **▲** button to select Channels Filter ,then press OK button to enter.

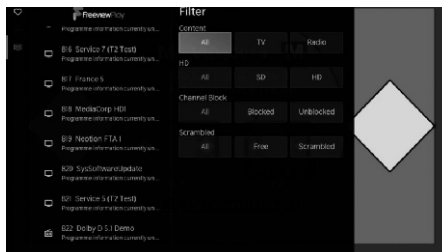




### User Guide

Press **▼** / **▲** button to select User Guide, then press OK button to enter.



## Media

   
Press **▼** / **▲** / **◀** / **▶** button to select Media on the Home page or press MEDIA button on the remote, and press OK button to enter the Media Center.

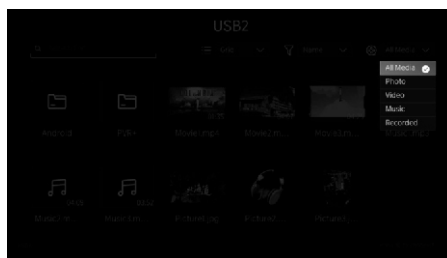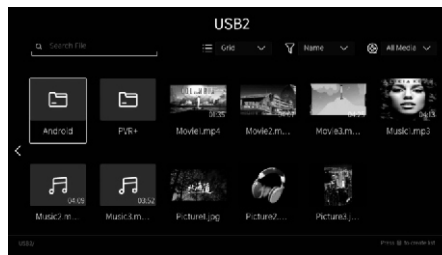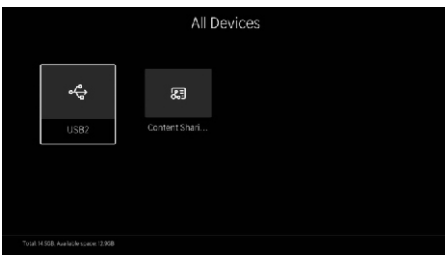

## OPERATION OF FUNCTION MENU

### Video

 Press【▼】/【▲】button to select Video or All, and press【▼】/【▲】/【◀】/【▶】button to select Movies. Press MENU button to display the setting options on the left side.

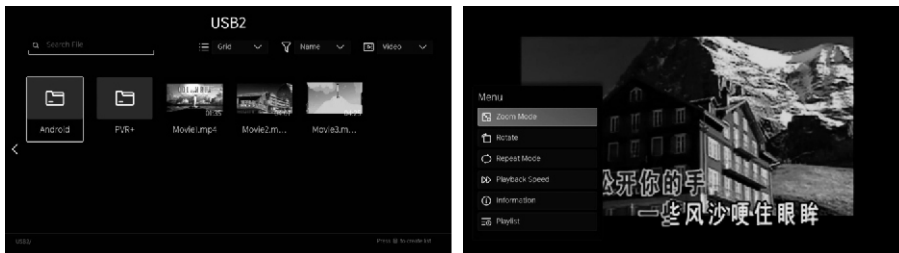

### Zoom Mode

Press【▼】/【▲】button to select Zoom Mode, and press OK button to select.  
(Optional: Fit/Full/Original Size)

### Rotate

Press【▼】/【▲】button to select Rotate, and press OK button to select.  
(Options: Right 90°/Left 90°)

### Repeat Mode

Press【▼】/【▲】button to select Repeat Mode, and press OK button to select.  
(Optional: No Repeat/Repeat the current one/Repeat All)

### Playback Speed

Press【▼】/【▲】button to select Playback Speed, and press OK button to select.  
(Optional: Normal/2/4/8/16)

### Information

 
Press【▼】/【▲】button to select Information, and press OK button to view.

### Playlist

Press【▼】/【▲】button to select Playlist, and press OK button to display all available videos.

### Photo

Press【▼】/【▲】button to select Photo or All, and press【▼】/【▲】/【◀】/【▶】button to select Picture.

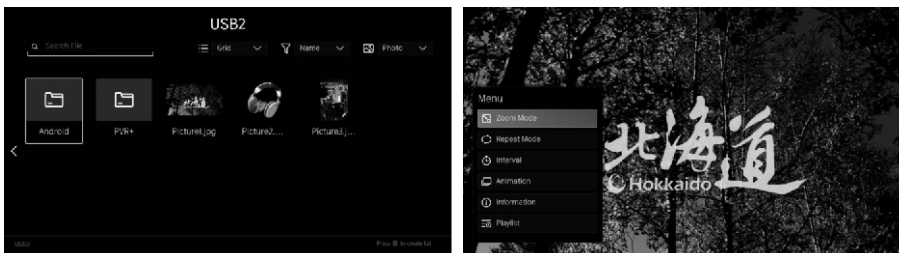

### Zoom Mode

Press【▼】/【▲】button to select Zoom Mode, and press OK button to select.  
(Optional: Fit/Original Size)

## OPERATION OF FUNCTION MENU

### Repeat Mode

Press **▼** / **▲** button to select Repeat Mode, and press OK button to select.  
(Optional: No Repeat/Repeat All)

### Interval

Press **▼** / **▲** button to select Interval, and press OK button to select.  
(Optional: 5S/10S/20S)

### Animation

Press **▼** / **▲** button to select Animation, and press OK button to setup.

### Information

 
Press **▼** / **▲** button to select Information, and press OK button to view.

### Playlist

Press **▼** / **▲** button to select Playlist, and press OK button to display all available Picture.

### Music

Press **▼** / **▲** button to select Music or All, and press **▼** / **▲** / **◀** / **▶** button to select Music.

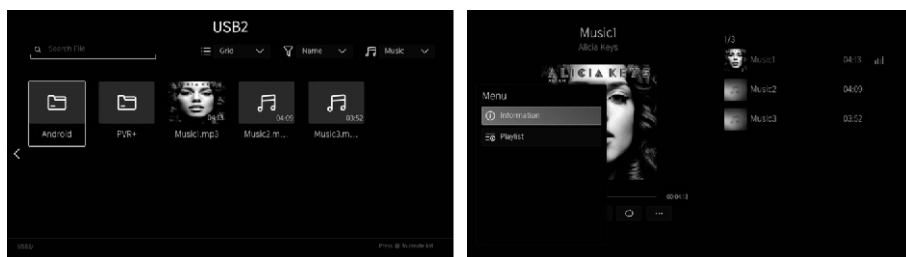

### Information

Press **▼** / **▲** button to select Information, and press OK button to view.

### Playlist

Press **▼** / **▲** button to select Playlist, and press OK button to display all available videos.  
(Optional: Pause/Repeat All/Edit)

## TROUBLE SHOOTING GUIDE

Many apparent malfunctions are caused slight misadjustments of the regular controls of your unit or equally simple causes. If any difficulty arises through normal use of your unit, check the list of common problems in the list below.

**If the problem persists, unplug your unit and contact your dealer.**

| SYMPTOM                                                      | METHODS OF CHECKING OR ADJUSTING                                                                                                                                                                                                     |
|--------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No picture or sound                                          | Check the AC plug is in the socket. Check house circuit breaker is in the ON position.                                                                                                                                               |
| Picture normal but no sound                                  | Check that the volume is not at its minimum setting or on MUTE.                                                                                                                                                                      |
| Remote control not working                                   | Check that TV set power is ON.<br>Check batteries are operational and inserted correctly.<br>Make sure infrared receiving window on TV is not exposed to strong lighting or blocked in any way.                                      |
| Cannot receive any TV signal                                 | Ensure SOURCE switch is set to TV.<br>Check aerial location and connection.<br>Re-check your tuning method.                                                                                                                          |
| No program signals output from external source               | Check SOURCE button to make sure it is in the correct position for reception.                                                                                                                                                        |
| Contrast and brightness problems                             | Make necessary adjustments to relevant settings.                                                                                                                                                                                     |
| Intermittent poor contrast and colour fading on all channels | Check aerial positioning                                                                                                                                                                                                             |
| Dotted lines or stripes appear on screen                     | There may be Interference from another electrical product. Move appliance if it persists.                                                                                                                                            |
| Snow on screen                                               | Check aerial for broken circuit, loose connection or any visible damage.                                                                                                                                                             |
| Double images or 'ghosting'                                  | Check aerial location and direction - strong winds may cause it to move. Also check whether mountains or tall buildings may be the problem. Minor adjustment of the direction of your antenna should keep the ghosting to a minimum. |

**Note:** External rooftop/antenna adjustment should be left to a suitably qualified person.

## STAND INSTALLATION

**Step 1:** Take out the TV/Monitor and carefully put it (screen downward) on a stable and flat table with a soft cloth or cushion on it.

**Step 2:** Please check to make sure there are the same mark (L/R) on the TV/Monitor back and the correct stand. This step is not available for the stands without any mark on it, or not available for the TV/Monitor with one stand only.

**Step 3:** Fix the stands to the TV/Monitor by fastening the matching screws provided in the box. The stand may vary depending on the region or model.

